


2. Service programme (Incanto classic)

2.1. Test mode

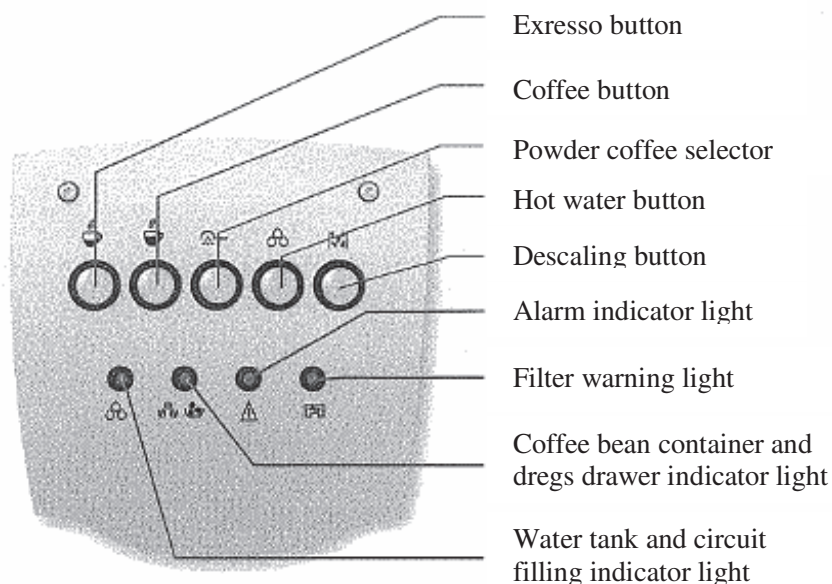

Access: Access the service mode by turning on the machine and simultaneously pressing the coffee and hot water buttons.

The various functions indicated in the table can be checked by pressing the button combinations listed below.

Programme table (functions programme)

Buttons	Powder coffee	Coffee	Espresso	Hot water	Descale	Microswitch status
Gears up	x					Powder LED (MS2)
Unit down		x				Espresso LED (MS1)
Grinder			x			
Pump				x +HWS		Fault LED (flow meter pulses) *
Heating	x				x	
Heating + LED check	x				x + HWS	

* In order for the flow meter pulse to be indicated, the HWS valve must close once again after opening so that the HWS microswitch re-opens.

If the HWS valve is completely open, the LED combination which lights up provides information on the flow rate (see table below)

Flow rate

The flow rate value must be between 40 and 60.

LED description	Value
Espresso button LED	128
Coffee button LED	64
Powder button LED	32
Hot water button LED	16
Descale button LED	8
Water Low LED	4
Coffee Beans Low LED	2
Fault LED	1

Example: Powder button (32), Descale button (8) and Coffee Beans Low LED (2) light up = 42

Microswitch test

Microswitch	Control LED	Status
Reed switch (tank removed)	Water low	ON
Dregs drawer/Drip tray (removed)	Coffee beans low	ON
HWS switch (open)	Fault	Off
Door switch (doors open)	Descale	ON
Brewing unit (removed)	Hot water	Steam LED

Dose quantity programming

Open hot water valve and press the espresso button.

Depending on the LED combination, the dose quantity can be determined by consulting the table below and can be changed by repeatedly pressing the coffee programme button.

Grinder pulses	Approx. dose quantity in grams	Water Low LED	Coffee Beans Low LED	Fault LED	Replace filter LED
90	7.5	☀			
95	8.0	☀	☀		
100	8.4		☀		
105	8.9		☀	☀	
110	9.2			☀	
115	9.6			☀	☀
120	10.2				☀