


2.3. User programme (Incanto classic)

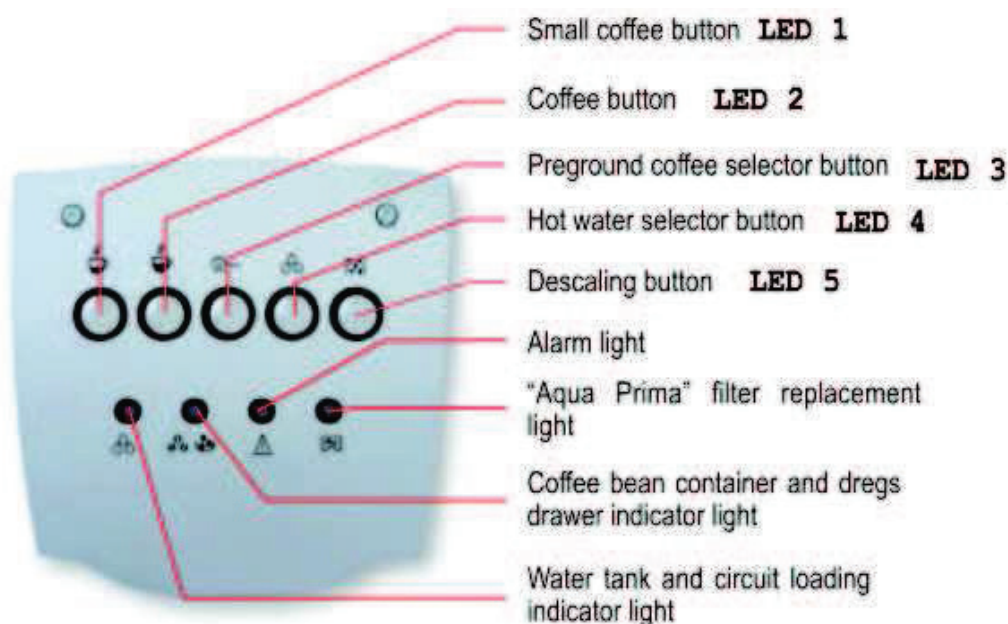

The table below indicates the various settings and programmes which can be selected through the user programme options.

Access: The machine must be turned on with the espresso and hot water buttons pressed in order to enter the programming mode.

Function	Button	Status	LED indicator	
			Without filter	With filter
Water hardness setting for descaling indicator	Powder coffee (Press to activate an additional LED and then change descaling interval.)	0 – very soft water (0° - 3°dH) 800l	1	
		1 – soft water (4° - 7°dH) 400l	1+2	1
		2 – medium water (7°-14°dH) 200l	1+2+3	1+2
		3 – hard water (14°-21°dH) 100l	1+2+3+4	1+2+3
		4 – very hard water (over 21°dH) 50l	1+2+3+4+5	1+2+3+4
				When using a filter, the next interval can be chosen.
Rinse programme	Espresso	ON/OFF (LED lit up means programme activated)	Water Low LED	
Pre-brewing	Coffee	ON/OFF (LED lit up means programme activated)	Coffee Beans Low LED	