
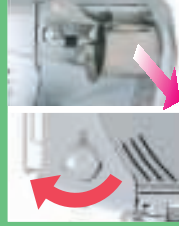


DESCALING

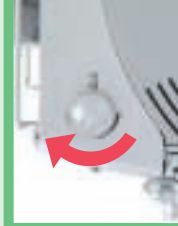

Warning! Never use vinegar as a descaling agent. You can use any commercially available non-toxic, non-harmful descaling product for coffee machines. We recommend using a Saeco descaling agent.

Descaling is necessary every 2-3 months, when you observe a diminished flow of water, reduced steam pressure or when the machine signals that descaling is necessary. The machine must be on; it automatically controls the distribution of the descaling solution.

 DESCALING					When the machine needs descaling, the indicator light will flash.	Remove the cartridge filter carefully.	Fill the water tank with the descaling solution.	Place a large container under the steam wand.	Press the indicator light for 5 seconds. The indicator light will come on steadily.
					Open the knob. The descaling process starts.	The machine will run the solution at intervals until the water tank is empty.	The lights will flash to signal when descaling is over.	Close the knob. Remove the container.	Rinse out the tank and fill it with fresh water.
					Place a large container under the steam wand.	Open the knob to rinse.	When no water is left, turn the knob to close the valve.	Remove the container.	When descaling is over, fit the cartridge filter back in place.

! If the descaling cycle is interrupted, the water tank and internal machine circuits must be rinsed.